

# GoPro Hero 1 User Manual

## Getting started

### Set up your GoPro



#### 1 Battery and card

Remove the camera from its housing simply by opening the backdoor. Slide the latch over on the battery door and pop in the battery before closing it. On the side you'll find a memory card compartment – open it up and push your Micro SD card into place.



**2 Rehouse** It's important that you put the housing back on your camera correctly to ensure it's kept waterproof and safe from dust and debris. So slide the camera back into its housing and close the backdoor by snapping the top latch down firmly.



**3 Let's get filming** To turn the camera on press the Mode button on the front. If you press it again you'll find the folder of modes, where you can flick between filming and photography modes. When you're ready to record, hit the shutter button and tap it again to stop.

GoPro Hero 1 User Manual: The GoPro Hero 1 marked the beginning of a revolution in action cameras, providing users with the ability to capture stunning high-definition videos and photos in extreme conditions. Released in 2009, this camera quickly became a favorite among adventure enthusiasts, filmmakers, and content creators. The GoPro Hero 1 User Manual serves as a crucial guide for both new and experienced users, ensuring that they can make the most of this innovative device. In this article, we will explore the features, setup, operation, maintenance, and troubleshooting of the GoPro Hero 1, as outlined in the user manual.

# Getting Started with the GoPro Hero 1

## Unpacking Your GoPro Hero 1

When you first unbox your GoPro Hero 1, you will find the following items:

1. GoPro Hero 1 Camera
2. Rechargeable Lithium Battery
3. Waterproof Housing
4. Mounting Buckle
5. 3M Adhesive Mount
6. USB Cable
7. Quick Start Guide
8. Safety Information

Make sure to check that all items are included in your package. If any items are missing, contact your retailer immediately.

## Charging the Battery

Before using your GoPro Hero 1 for the first time, it's essential to charge the battery fully. Follow these steps:

1. Insert the battery into the camera.
2. Connect the USB cable to the camera and plug the other end into a USB power outlet or computer.
3. A red light will blink while charging and will turn off when fully charged.

Note: It's recommended to use the original GoPro charger or a compatible USB charger to ensure safe charging.

## Camera Setup

### Inserting the Battery and Memory Card

To get started, you need to insert the battery and memory card:

1. Open the battery compartment located at the bottom of the camera.
2. Insert the battery by aligning the gold contacts and pushing it in until it clicks.
3. Open the memory card slot (supports SD cards up to 32GB) and insert the

card until it clicks into place.

## **Mounting the Camera**

The GoPro Hero 1 can be mounted in various ways to capture unique angles. Here are some of the most common mounting options:

- Adhesive Mounts: Ideal for fixed surfaces like helmets, cars, and other equipment.
- Bicycle Mounts: Perfect for capturing rides and adventures.
- Tripod Mount: Use a standard tripod for stable filming.

Make sure to clean the surface before applying adhesive mounts for better adhesion.

## **Operating the GoPro Hero 1**

### **Powering On and Off**

To turn on the GoPro Hero 1, press the power button located on the front of the camera. To turn it off, hold the power button until the red light turns off.

### **Switching Modes**

The GoPro Hero 1 offers various modes for capturing images and videos, including:

- Video Mode: For recording video at 1080p or 720p.
- Photo Mode: Capture still images.
- Burst Mode: Take multiple photos in quick succession.

To switch between these modes, press the mode button on the front of the camera until you reach your desired setting.

## **Adjusting Settings**

Users can adjust various camera settings through the following:

1. Resolution: Change the resolution to fit your needs.
2. Field of View (FOV): Select between Wide, Medium, or Narrow FOV.

3. White Balance: Adjust for different lighting conditions.

To access the settings, navigate using the mode button and select options using the shutter button.

## **Capturing Media**

### **Recording Video**

To start recording video:

1. Turn on the camera.
2. Select Video Mode.
3. Press the shutter button to start recording. A red light will indicate that recording is in progress.
4. Press the shutter button again to stop recording.

### **Taking Photos**

Capturing photos is equally straightforward:

1. Power on the camera.
2. Switch to Photo Mode.
3. Frame your shot and press the shutter button to take a picture.

### **Using Burst Mode**

Burst mode allows you to take several photos in quick succession:

1. Select Burst Mode.
2. Press and hold the shutter button to capture up to 10 photos in one go.

## **Connecting to a Computer**

### **Transferring Files**

To view and edit your media, connect the GoPro Hero 1 to your computer via the USB cable. Follow these steps:

1. Power on the camera.
2. Connect it to your computer using the USB cable.
3. The camera will appear as a removable drive.
4. Drag and drop files to your desired location on your computer.

## **Updating Firmware**

Keeping your firmware updated ensures optimal performance. To update:

1. Visit the GoPro website and download the latest firmware.
2. Follow instructions to install it via the USB connection.

## **Maintaining Your GoPro Hero 1**

### **Cleaning the Camera**

Regularly clean your GoPro to maintain its performance:

- Use a soft, dry cloth to wipe the lens.
- Clean the housing with fresh water after exposure to saltwater or sand.

### **Storing the Camera**

When not in use, store your GoPro in a cool, dry place. Remove the battery to prevent corrosion and ensure longer battery life.

## **Troubleshooting Common Issues**

Despite its robust design, users may encounter issues. Here are some common problems and their solutions:

1. Camera Won't Turn On:
  - Ensure the battery is charged.
  - Check if the battery is properly inserted.
2. Camera Freezes:
  - Remove the battery and reinsert it.
  - Perform a reset by holding the power button for 10 seconds.
3. Poor Image Quality:
  - Adjust the resolution settings.

- Ensure the lens is clean and free of obstructions.

#### 4. Memory Card Errors:

- Ensure the card is compatible and properly inserted.
- Format the card using the camera settings.

## Conclusion

The GoPro Hero 1 User Manual is an invaluable resource for anyone looking to harness the full potential of this iconic action camera. By understanding the features, setup, and operation detailed in the manual, users can capture breathtaking photos and videos, whether they are surfing, skiing, biking, or simply enjoying everyday adventures. Regular maintenance and troubleshooting techniques will ensure that your GoPro Hero 1 continues to perform at its best for years to come. With this guide, you are now equipped to take your content creation to the next level with the GoPro Hero 1.

## Frequently Asked Questions

### **What is included in the GoPro Hero 1 user manual?**

The GoPro Hero 1 user manual typically includes sections on camera setup, operation instructions, troubleshooting tips, maintenance advice, and safety information.

### **Where can I find the GoPro Hero 1 user manual online?**

The GoPro Hero 1 user manual can be found on the official GoPro website under the support section, or by searching for 'GoPro Hero 1 user manual PDF' in a search engine.

### **How do I charge the GoPro Hero 1 battery according to the manual?**

The user manual advises connecting the camera to a computer using the provided USB cable or using a compatible wall charger to charge the battery.

### **What are the recommended settings for shooting video with the GoPro Hero 1?**

The manual suggests using 1080p resolution at 30 frames per second for optimal video quality, along with the appropriate field of view based on your shooting conditions.



GoPro ...

GoPro -

GoPro 512GB TF microSD microSDHC microSDXC 64G 128G

GoPro Windows PC ...

Jan 8, 2025 · GoPro Windows PC (120) MP4 → MOV

2025 4

2025 AI AI AR

gopro 10 Black -

The GoPro 10 Black is a highly advanced action camera with excellent stabilization and image quality, making it a top choice for extreme sports enthusiasts.

2025 6 GoPro

Jun 21, 2025 · GoPro gopro GoPro GoPro vlog

GoPro

Jun 8, 2025 · GoPro 8

2024 GoPro -

GoPro Session HERO7 Black HERO8 Black HERO9 Black MAX

GoPro -

GoPro GoPro GoPro

2022 8 gopro -

Aug 8, 2022 · GoPro

2025 Gopro 13 ation 5 Pro Insta360

Jan 14, 2025 · Gopro Insta360

GoPro -

GoPro 512GB TF microSD microSDHC microSDXC 64G 128G

GoPro Windows PC ...

Jan 8, 2025 · GoPro Windows PC (120) MP4 → MOV

2025 4



2025 AI AI AR  
...

gopro 10 Black - 00

The GoPro 10 Black is a highly advanced action camera with excellent stabilization and image quality, making it a top choice for extreme sports enthusiasts.

2025 6 GoPro

Jun 21, 2025 ·   gopro   GoPro  GoPro   

□□□□□□...**GoPro**□□□□□□□□□□□□□□□□.

Jun 8, 2025 · GoPro8—  
...

 

2024 GoPro -


GoPro Session HERO7 Black HERO8 Black HERO9 Black MAX ...

## GoPro -

`GoPro`, `GoPro`

2022 8 gopro -

Aug 8, 2022 ·  GoPro 

 ...

Unlock the full potential of your GoPro Hero 1 with our comprehensive user manual. Learn more about features

[Back to Home](#)