


# Lennox Elite Series Furnace Manual

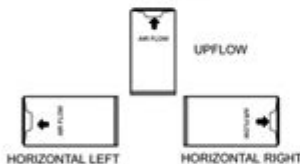


## INSTALLATION INSTRUCTIONS EL195UH

ELITE® SERIES GAS FURNACE  
UPFLOW / HORIZONTAL AIR DISCHARGE

506596-01  
03/2011  
Supersedes 02/2011

TP Technical  
Publications  
Litho U.S.A.

THIS MANUAL MUST BE LEFT WITH THE  
HOMEOWNER FOR FUTURE REFERENCE

 This is a safety alert symbol and should never be ignored. When you see this symbol on labels or in manuals, be alert to the potential for personal injury or death.

### CAUTION

As with any mechanical equipment, personal injury can result from contact with sharp sheet metal edges. Be careful when you handle this equipment.

### WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a licensed professional installer (or equivalent), service agency or the gas supplier.

#### Table of Contents

|                                               |    |                                           |    |
|-----------------------------------------------|----|-------------------------------------------|----|
| Unit Dimensions .....                         | 2  | Venting Practices .....                   | 16 |
| EL195UH Parts Arrangement .....               | 3  | Vent Piping Guidelines .....              | 17 |
| EL195UH Gas Furnace .....                     | 4  | Gas Piping .....                          | 34 |
| Shipping and Packing List .....               | 4  | Electrical .....                          | 37 |
| Safety Information .....                      | 4  | Unit Start Up .....                       | 40 |
| Use of Furnace as a Construction Heater ..... | 5  | Gas Pressure Measurement .....            | 42 |
| General .....                                 | 6  | Proper Combustion .....                   | 42 |
| Combustion, Dilution, Ventilation Air .....   | 6  | High Altitude .....                       | 42 |
| Setting Equipment .....                       | 9  | Other Unit Adjustments .....              | 44 |
| Filters .....                                 | 13 | Blower Motor Performance .....            | 45 |
| Duct System .....                             | 13 | Service .....                             | 47 |
| Pipe and Fittings Specifications .....        | 13 | Planned Service .....                     | 49 |
| Joint Cementing Procedure .....               | 15 | Integrated Control Diagnostic Codes ..... | 49 |
|                                               |    | Troubleshooting .....                     | 50 |
|                                               |    | Repair Parts List .....                   | 53 |
|                                               |    | Start Up Checklist .....                  | 54 |

03/11



Page 1

506596-01



Downloaded from [www.lennox.com](http://www.lennox.com) search engine

## Lennox Elite Series Furnace Manual

The Lennox Elite Series Furnace Manual serves as an essential guide for homeowners and technicians alike, providing critical information about the operation, maintenance, and troubleshooting of Lennox's high-efficiency furnaces. With advanced features designed for optimal comfort and energy savings, understanding how to properly operate and maintain these systems is crucial. This article will delve into the various aspects of the Lennox Elite Series Furnace, including its features, installation process, maintenance tips, and troubleshooting common issues.

# Overview of the Lennox Elite Series

The Lennox Elite Series is known for its advanced technology, energy efficiency, and reliability. These furnaces are designed to provide consistent heating while minimizing energy costs. Key features include:

- High Efficiency: Many models in the Elite Series achieve AFUE ratings of 80% to 98%, meaning they convert a significant portion of fuel into usable heat.
- Variable Speed Blower: This feature helps in maintaining a consistent temperature throughout the home while reducing noise levels.
- Quiet Operation: With sound-dampening technology, these furnaces operate quietly, enhancing indoor comfort.
- Smart Thermostat Compatibility: The Elite Series furnaces can be integrated with smart home systems for better control and monitoring.

## Installation of the Lennox Elite Series Furnace

Installing a Lennox Elite Series furnace is a task that requires technical knowledge and skills. Proper installation is critical for efficient operation and longevity of the furnace. Here's a general step-by-step guide:

### Tools and Equipment Needed

Before starting the installation, ensure that you have the following tools:

- Screwdrivers (flat and Phillips)
- Wrench set
- Level
- Tape measure
- Drill
- Safety goggles and gloves

### Installation Steps

#### 1. Preparation:

- Read the installation manual thoroughly.
- Check local codes and regulations for furnace installation.
- Prepare the installation area by ensuring there is enough space and access to necessary utilities (gas, electricity, and ventilation).

#### 2. Mounting the Furnace:

- Position the furnace on a level surface.
- Secure it in place to prevent movement.

### 3. Connecting Ductwork:

- Attach the supply and return ducts to the furnace.
- Ensure all connections are airtight to prevent air leaks.

### 4. Gas and Electrical Connections:

- Connect the gas line to the furnace, ensuring it is leak-free.
- Connect the electrical wiring according to the manual's specifications.

### 5. Ventilation:

- Install the venting system to expel exhaust gases safely.
- Ensure compliance with local codes.

### 6. Final Checks:

- Check all connections for tightness and leaks.
- Test the furnace to ensure it operates correctly.

It's recommended to hire a licensed HVAC technician for installation to ensure compliance with safety standards and regulations.

## Operating Your Lennox Elite Series Furnace

Understanding how to operate your Lennox Elite Series furnace is essential for achieving optimal performance and comfort. The operation usually involves:

### Thermostat Settings

- Temperature Control: Set your thermostat to your desired temperature. The furnace will automatically adjust to maintain this temperature.
- Fan Settings: You can choose between "Auto" and "On" settings for the fan. "Auto" allows the fan to operate only when the furnace is heating, while "On" keeps the fan running continuously.

### Seasonal Adjustments

- Winter Mode: Ensure the furnace is set to heating mode during the colder months.
- Summer Mode: If your furnace has a cooling function, switch to cooling mode when necessary.

## Maintenance Tips for the Lennox Elite Series

# **Furnace**

Regular maintenance is critical for ensuring the longevity and efficiency of your furnace. Here are some key maintenance tips:

## **Monthly Maintenance**

- **Check and Replace Air Filters:** Dirty filters can restrict airflow and reduce efficiency. Check filters monthly and replace them as necessary.
- **Inspect the Thermostat:** Ensure it functions correctly and that the settings are accurate.

## **Seasonal Maintenance (every fall and spring)**

- **Professional Inspection:** Schedule an annual inspection with a qualified technician who can perform a thorough check-up.
- **Clean the Furnace:** Dust and debris can accumulate inside the furnace. Clean accessible components gently with a vacuum.
- **Inspect Venting and Ductwork:** Ensure there are no blockages, and check for any signs of wear or damage.

## **Troubleshooting Common Issues**

**Even the most reliable systems can encounter issues. Here are some common problems and their potential solutions:**

### **Furnace Won't Start**

- **Check the Thermostat:** Ensure it is set to "Heat" and the temperature setting is above the current room temperature.
- **Inspect Power Supply:** Check circuit breakers and fuses to ensure the furnace has power.

## **Inconsistent Heating**

- **Dirty Air Filters:** Replace or clean the air filters if they are clogged.
- **Duct Leaks:** Inspect ductwork for leaks and seal them if found.

## **Strange Noises**

- **Rattling or Banging:** Check for loose components that may need tightening.
- **Whistling Sounds:** This may indicate airflow issues or a blocked filter.

## **Frequent Cycling On and Off**

- **Short Cycling:** This could be due to an oversized furnace or a faulty thermostat. Consult a professional to diagnose the problem.

## **Conclusion**

The Lennox Elite Series Furnace is a sophisticated heating solution that combines efficiency, reliability, and comfort. Understanding the operation, installation, maintenance, and troubleshooting of your furnace is essential for maximizing its performance and lifespan. By following the guidelines outlined in this manual, homeowners can ensure their Lennox furnace operates at peak efficiency, providing warmth and comfort throughout the winter months. For any complex issues, always consult a licensed HVAC professional to ensure safety and compliance with local regulations.

## Frequently Asked Questions

What is the purpose of the Lennox Elite Series furnace manual?

The Lennox Elite Series furnace manual provides essential information on installation, operation, maintenance, and troubleshooting for the furnace, helping users ensure optimal performance and safety.

Where can I find the Lennox Elite Series furnace manual?

The Lennox Elite Series furnace manual can be found on the official Lennox website under the support or resources section, or it can be obtained from your local Lennox dealer.

How do I reset my Lennox Elite Series furnace according to the manual?

To reset your Lennox Elite Series furnace, locate

the power switch, turn it off for about 30 seconds, and then turn it back on. You may also need to press the reset button on the control board, as detailed in the manual.

What maintenance tasks are recommended in the Lennox Elite Series furnace manual?

The manual recommends regular maintenance tasks such as changing the air filter every 1-3 months, cleaning the blower motor, checking the flue for blockages, and scheduling annual professional inspections.

What should I do if my Lennox Elite Series furnace is not heating?

If your furnace is not heating, check the thermostat settings, ensure the power is on, and inspect the air filter. If these steps do not resolve the issue, consult the troubleshooting section of the manual or contact a professional technician.

Are there safety precautions mentioned in the Lennox Elite Series furnace manual?

Yes, the manual includes important safety precautions such as ensuring proper ventilation, keeping the area around the furnace clear of debris, and shutting off power before performing maintenance or repairs.

What is the warranty information provided in the Lennox Elite Series furnace manual?

The manual outlines the warranty coverage for the Lennox Elite Series furnace, typically including a limited lifetime warranty on the heat exchanger and a 5 to 10-year warranty on parts, depending on the

model and registration.

Find other PDF article:

<https://soc.up.edu.ph/21-brief/files?trackid=kcm20-9307&title=exercise-physiology-quizlet.pdf>

## Lennox Elite Series Furnace Manual

**Goodman** **lennox** **Energy.gov** - **67**

**Goodman** **lennox** **Energy.gov** **67** ...

**LB** - **Mar 15, 2016**

**Mar 15, 2016** · **LB** **out** **Posted on** ...

...

**NaCl** **LB** - **Miller** **LB** - **Lennox** **LB** - **DNA** **DNA** ...

**Adam** (**Adaptive Moment Estimation**) - **Adam**

**Adam** **Adam** ...

**lb** - **lb**

**lb** **Lennox** **broth without salt (LB-NS)** **2**



~~~~~**BBC**~~~~~ - ~~~

Mr. Henry Lennox stood leaning against the chimney-piece, amused with the family scene. He was close by his handsome brother; he was the plain one in a singularly good-looking family; ...

~~~~~~~~~~ - ~~~

~~~~~,~~~~~ ~~~ ~.~~~~.~~~~ (Ian Lennox McHarg, 1920--2001) ~1969~~~~,~~~~  
~ ...

~~~~~? - ~~~

Oct 22, 2022 · ~~~~~  
1~Lennox~~~~ 2~Carrier~~~~ 3~AirStow~~~~ 4~Whirlpool  
~~~~ 5~Rheem~~~~

~~~~~3~~~~*Into the West*~ - ~~~

~~~~~ Into the West ~~~~~ Song by  
Annie Lennox Lay down Your sweet and weary head ~~~~~  
~~~~~ Night is falling~~ ...

~~~~~Goodwood Festival of Speed~~~~~ ...  
Charles Gordon-Lennox~the Earl of March and Kinrara~  
2.2/ ~~~~~ 1993~~~~~Charles  
~the Earl of March and Kinrara~ ...

Goodman~lennox~~~~~ - ~~~

Goodman~lennox~~~~~  
~~~~~ ~ **Energy.gov** ~~~~~67~~~~~ ...

~~~~~**LB**~~~~~ - ~~~

Mar 15, 2016 · ~~~~~  
~~~~~ **LB**~out~ Posted on ...

~~~~~

NaCl LB - Miller LB - Lennox LB  
- LB DNA DNA  
...

Adam (Adaptive Moment Estimation) -  
Adam  
Adam ...

lb -  
lb Lennox  
broth without salt (LB-NS) 2  
...

BBC -  
Mr. Henry Lennox stood leaning against the chimney-  
piece, amused with the family scene. He was close by  
his handsome brother; he was the plain one in a  
singularly good-looking family; ...

-  
, (Ian Lennox  
McHarg, 1920--2001) 1969,  
...

? -  
Oct 22, 2022 ·  
1 Lennox 2 Carrier 3 AirStow 4 Whirlpool  
5 Rheem

3 Into the West -  
Into the West Song by  
Annie Lennox Lay down Your sweet and weary head  
Night is falling ...

Goodwood Festival of Speed ...  
Charles Gordon-Lennox the Earl of March and Kinrara  
2.2/ 1993 Charles  
the Earl of March and Kinrara ...

Find the Lennox Elite Series furnace manual you  
need! Access detailed instructions

[Back to Home](#)