

Smok Scar 18 Instructions



SMOK Scar 18 Instructions

The SMOK Scar 18 is a robust and powerful vape device designed to cater to both beginners and seasoned vapers. Renowned for its durability and performance, the Scar 18 features advanced technology that ensures a satisfying vaping experience. This article will provide comprehensive instructions on how to use, maintain, and troubleshoot the SMOK Scar 18, ensuring you get the most out of your device.

Overview of the SMOK Scar 18

The SMOK Scar 18 is a box mod that combines rugged aesthetics with high-performance capabilities. Here are some of its key features:

- Power Range: The device can deliver up to 230 watts of power.
- Dual 18650 Batteries: It operates with two external 18650 batteries, offering extended usage time.
- IP67 Rating: The Scar 18 is water-resistant and dustproof, making it suitable for outdoor use.
- User-Friendly Interface: It has a 0.96-inch TFT display that shows essential vaping information.
- Multiple Modes: The device supports several modes, including wattage mode, temperature control, and more.

Getting Started with the SMOK Scar 18

Before you begin using the SMOK Scar 18, it's essential to familiarize yourself with its components and how to set it up correctly.

Unboxing Your Device

When you receive your SMOK Scar 18, you will find the following items included in the box:

1. SMOK Scar 18 Device
2. TFV9 Tank
3. V9 Meshed Coil (Pre-installed)
4. Extra V9 Meshed Coil
5. USB Type-C Cable
6. User Manual
7. Warranty Card

Charging the Batteries

The SMOK Scar 18 requires two 18650 batteries, which are not included in the box. Follow these steps to charge your batteries:

1. Purchase Quality Batteries: Ensure you buy high-quality 18650 batteries from a reputable brand.
2. Battery Installation:
 - Remove the battery cover from the device.
 - Insert the batteries according to the indicated polarity (+ and -).
 - Replace the battery cover securely.

3. Charging:

- You can charge the batteries using an external charger or via the device's USB Type-C port.
- If using the USB port, connect the device to a power source using the provided USB cable.

Assembly of the Tank

The SMOK Scar 18 comes with the TFV9 tank, which is known for its flavor and vapor production.

Filling the Tank

1. Remove the Tank: Unscrew the tank from the mod.
2. Top Fill Design: Locate the top fill slot by pushing the top cap to the side.
3. Add E-Liquid: Pour your chosen e-liquid into the fill slot, avoiding the center airflow tube.
4. Reassemble: Replace the top cap and screw the tank back onto the mod.

Coil Installation

To replace or install a coil:

1. Remove the Base: Unscrew the base of the tank.
2. Remove the Old Coil: Pull the old coil out gently.
3. Insert New Coil: Press the new coil into the base until it's secure.
4. Reassemble the Tank: Screw the base back onto the tank.

Operating the SMOK Scar 18

Once your device is charged and the tank is filled, you are ready to use the SMOK Scar 18.

Powering On/Off

- To Turn On: Click the fire button five times rapidly.
- To Turn Off: Click the fire button five times again.

Adjusting Wattage

1. After turning on the device, press the fire button three times to enter the mode selection.
2. Use the adjustment buttons (+ and -) to set your desired wattage.
3. The device will automatically adjust to the optimal settings based on the coil used.

Choosing Modes

The SMOK Scar 18 supports several operating modes. Here's how to switch between them:

1. Press the Fire Button Three Times: This opens the mode selection menu.
2. Navigate: Use the adjustment buttons to scroll through the modes (Wattage, Temperature Control, etc.).
3. Select Your Mode: Press the fire button to confirm your selection.

Temperature Control Mode

For those who prefer temperature control:

1. Select "Temperature Control" from the mode menu.
2. Set your desired temperature using the adjustment buttons.
3. Ensure you are using a compatible coil (usually made of stainless steel, nickel, or titanium).

Maintenance and Care

To ensure the longevity of your SMOK Scar 18, proper maintenance is crucial.

Regular Cleaning

- Tank Cleaning: Regularly disassemble and clean the tank components with warm water and mild soap.
- Device Cleaning: Wipe the exterior of the mod with a soft, damp cloth.

Coil Replacement Schedule

- Replace your coil every 1-2 weeks, or sooner if you notice a burnt taste or

reduced vapor production.

Battery Safety

1. Use Quality Batteries: Always use reputable batteries designed for vaping.
2. Check for Damage: Inspect batteries for any signs of damage before use.
3. Avoid Overcharging: Do not leave your device charging unattended.

Troubleshooting Common Issues

Even the best devices can face problems from time to time. Here are some common issues and their solutions.

Device Won't Turn On

- Check Battery Installation: Ensure the batteries are installed correctly.
- Charge Batteries: If the batteries are low, charge them fully before trying again.

Burnt Taste from the Coil

- Check E-Liquid Level: Ensure the tank has sufficient e-liquid.
- Change Coil: If the coil is old or burnt out, replace it.

Leakage Issues

- Check Seals: Ensure all seals are intact and components are screwed tightly.
- Inspect Coil: A damaged or improperly installed coil can cause leaks.

Conclusion

The SMOK Scar 18 is an impressive device that combines style, performance, and durability. With the instructions provided in this article, you should be well-equipped to set up, operate, and maintain your device effectively. Always prioritize safety by using quality components and adhering to maintenance guidelines. Enjoy your vaping experience with the SMOK Scar 18!

Frequently Asked Questions

What is the recommended wattage range for the SMOK Scar 18?

The SMOK Scar 18 is recommended to be used within a wattage range of 1 to 230 watts, depending on the coil used.

How do I fill the SMOK Scar 18 tank?

To fill the SMOK Scar 18 tank, slide the top cap to reveal the fill port, insert the e-liquid nozzle, and fill the tank. Be sure to close the cap securely after filling.

What type of coils are compatible with the SMOK Scar 18?

The SMOK Scar 18 is compatible with the SMOK TFV9 coils, including the V9 Meshed and V9 Mesh 0.15 ohm coils.

How do I turn on the SMOK Scar 18?

To turn on the SMOK Scar 18, press the power button five times rapidly.

What does the LED indicator on the SMOK Scar 18 signify?

The LED indicator on the SMOK Scar 18 shows the battery level: green for 70-100%, blue for 30-70%, and red for below 30%.

How do I lock the wattage settings on the SMOK Scar 18?

To lock the wattage settings on the SMOK Scar 18, press the '+' and '-' buttons simultaneously and hold them for a few seconds.

How do I perform a firmware update on the SMOK Scar 18?

To perform a firmware update on the SMOK Scar 18, download the latest firmware from the SMOK website, connect the device to a computer using a USB cable, and follow the on-screen instructions.

What safety features does the SMOK Scar 18 have?

The SMOK Scar 18 includes several safety features such as short circuit protection, over-heating protection, low battery warning, and 8-second cutoff.

<https://soc.up.edu.ph/35-bold/files?ID=ufd52-0960&title=juice-onn-wireless-charging-pad-instruction-s.pdf>

smok 247 5ml

[illegible]

`857` `smok rpm25 pozz pro 170-200`

[illegible]

smok - 16 innokin 13

```
SMOK - 
SMOK 40w rpm40 POZZ X; SMOK 80w rpm80 rpm2fetch pro smok
gpriv3 NFIXyan
```

2019 Pop Smoke Lil Tjay "War" Calboy "100k on a Coupe" 2019 12 27
 Pop Smoke Travis Scott Cactus Jack Records ...

VOOPOO UWELL SMOK GEEKVAPE

Смолы и никотин

В табачном дыме содержится около 10-15 мг смол и 1-2 мг никотина на сигарету.

smok 247 5ml

10 - 20
 10 20 SMOK ASPIRE
 ...

857 smok rpm25 pozz pro 170-200 ...

320W, Primus 300W, 300W. SMOK
 Primus 300W ...

[Back to Home](#)