


# Intertek Digital Timer Manual

## Daily / Weekly Electronic Timer

### Features

- Up to eight ON and OFF switches a day.
- Minimum switching period one minute.
- Summer time / Winter time changeover.
- Easy to read LCD display.
- Random automatic ON/OFF security feature.
- Manual override button.
- Selectable 12 <-> 24 hour mode.
- Built-in battery back-up.

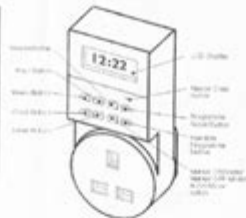

### Instructions for use

Before using your timer, please read the following instructions carefully and keep it for future reference.

#### Important safety note

- Do not use on an extension socket.
- Do not plug this timer onto another timer switch.
- Do not plug in any appliance where the load exceeds 3120 Watts 13 Amps.
- Do not plug any device performing mechanical movement directly into the timer.
- Always ensure the plug of any appliance is fully inserted into the timer outlet.
- Heaters and similar appliances should never be left unattended. It is recommended that these appliances not be connected to timers.
- Avoid moisture, extreme temperatures, shock and vibration.
- Use indoors only.
- Do not open the timer. No service part inside the timer.
- If cleaning of the timer is required, remove from mains and wipe with a dry cloth.
- Do not submerge in water or any other solvent.
- Keep out of reach of children.

#### Initiation

1. Plug the timer into mains for 12 hours to charge up the built-in backup battery.
2. After charging up, initiate the unit by gently pressing the MASTER CLEAR button with a pointer object such as ballpoint pen.  
(Never press the button hard as it can be permanently damaged)
3. The timer is now reset and ready for use.

#### Setting Current Time

Press and hold the CLOCK button. With this hold pressed, the WEEK button can be used to select the correct day, the HOUR button to select the correct hour and MIN button to select the correct minutes. The days, hours and minutes can be advanced by either holding down or repeatedly pressing the appropriate button.

#### Example:


- Now is 18:23, Wednesday. Set the current time.
- (a) Press and hold the CLOCK button.
  - (b) Press the WEEK button to select Wednesday - "WED".
  - (c) Press the HOUR button to set hour "18".
  - (d) Press the MINUTE button to set minute "23".
  - (e) Release the CLOCK button.



#### Programming of switching times

1. The AUTO Time Switch has the capacity for eight ON/OFF switches. For each ON time and each OFF time, the days or blocks of days, hours and minutes must be set.

2. Press the TIMER button once to go to TIMER setting mode and ready to set the first ON time. You will see "ON" and the number "1" appear on the left of the LCD display. This indicates that you can now input the first ON time. (see right diagram)

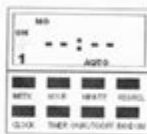

3. 16 combinations of day or blocks of days are available for this Timer. Press the WEEK button to consecutively choose the required day or blocks of day that you want the TIMER switch ON per the sequence as shown in the following table.

Page 1

LCD DISPLAY	MO	TU	WE	TH	FR	SA	SU
SEQ/DAY	Mon	Tue	Wed	Thu	Fri	Sat	Sun
1	*						
2		*					
3			*				
4				*			
5					*		
6						*	
7							*
8	*	*	*	*	*	*	*
9	*	*	*	*	*	*	*
10						*	*
11	*	*	*	*	*	*	*
12	*	*	*	*	*	*	*
13	*	*	*	*	*	*	*
14	*	*	*	*	*	*	*
15	*	*	*	*	*	*	*
16	*	*	*	*	*	*	*

4. Then set the hours and minutes using the HOUR and MINUTES buttons respectively.

#### Example:

Set the timer ON time to 20:55, every Monday. Ensure you are still in the TIMER setting mode. Otherwise, press TIMER button to enter the setting mode again.

- (a) Press the HOUR button to select "20".
- (b) Press the MINUTE button to select "55".



5. When you have completed setting the required ON time, press the TIMER button to move onto the first OFF time setting. You will see "OFF" and the number "1" appear on the LCD display. You can now input the first OFF time by using the WEEK, HOUR and MINUTE buttons as you did when setting the ON time. (Ensure you select the same day, or block of days, as you did for the ON setting).



#### Example:

Set the timer OFF time to 22:10, every Monday.

- (a) Press the WEEK button to select "MO".
- (b) Press the HOUR button to select "22".
- (c) Press the MINUTE button to select "10".



6. 8 ON/OFF programmes can be set for the timer. You can advance to the remaining programmes by pressing the TIMER button if required. Setting your ON/OFF schedule 2 in the same way of setting as you did on programme 1.

Indicate you are setting timer ON or timer OFF schedule.

Indicate which programme you are setting right now i.e. programme 2.



7. When you have set the required ON/OFF settings, press the CLOCK button to return the display to the clock. The timer now is ready to operate.

NOTE: you can check/amend the settings you have programmed by pressing the TIMER button repeatedly. Each setting will appear on the screen in order.

#### Erasing programmes without master resetting

- (a) Press TIMER button to select programme to be erased.
- (b) Press RES/CLC button to erase the programme.
- (c) To return to the display press the CLOCK button.

Example: Press the RES/CLC button to reset the number 3, timer ON programme.



## Intertek Digital Timer Manual

Digital timers have become essential tools in both domestic and professional settings, providing precise time management for cooking, workouts, and various tasks. The Intertek digital timer is one such device that is widely recognized for its reliability and ease of use. This comprehensive guide to the Intertek digital timer manual will cover its features, setup instructions, operational guidelines, troubleshooting tips, and maintenance practices.

# Features of the Intertek Digital Timer

The Intertek digital timer is packed with features designed to enhance user experience and functionality. Understanding these features can help users maximize the timer's capabilities.

## 1. Multiple Timing Modes

- Countdown Timer: Set the timer to count down from a specific time to zero, ideal for cooking or any timed tasks.
- Count-Up Timer: This mode allows the timer to count upward from zero, useful for tracking durations of activities.
- Clock Mode: Displays the current time, functioning as a standard clock when not in use as a timer.

## 2. User-Friendly Interface

- Large Display Screen: The timer features a clear and easy-to-read display, making it accessible even from a distance.
- Intuitive Buttons: Simple buttons for setting time, starting/stopping, and resetting make operation straightforward.

## 3. Memory Feature

- The timer is equipped with a memory function that allows users to save frequently used settings, simplifying repeated tasks.

## 4. Alarm Functionality

- The alarm is loud enough to be heard in a busy kitchen or workspace, ensuring users are alerted when time runs out.

## 5. Portability and Design

- Compact Size: The timer is lightweight and portable, ideal for use in various locations.
- Magnetic Backing: A magnetic back allows for easy attachment to metal surfaces such as refrigerators, keeping it within reach.

# Setting Up the Intertek Digital Timer

Setting up your Intertek digital timer is a straightforward process. Follow these steps to ensure proper functionality.

## **1. Insert Batteries**

- Open the battery compartment located on the back of the timer.
- Insert the required batteries (usually AA or AAA depending on the model).
- Ensure that the batteries are placed with correct polarity according to the markings inside the compartment.

## **2. Power On the Timer**

- Press the power button to turn on the device.
- The display should light up, indicating that the timer is functioning.

## **3. Setting the Time**

- To set the timer, press the "Set" button.
- Use the hour and minute buttons to adjust the countdown or count-up time.
- Confirm the settings by pressing the "Start" button.

# **Operating the Intertek Digital Timer**

Once your Intertek digital timer is set up, you can begin using it for various tasks. Here's how to operate its primary functions.

## **1. Using the Countdown Timer**

- After setting the desired time, press the "Start" button.
- The timer will begin counting down, and the display will update in real-time.
- An alarm will sound when the countdown reaches zero. Press any button to stop the alarm.

## **2. Using the Count-Up Timer**

- Press the "Count-Up" button to switch to this mode.
- Press "Start" to begin counting up from zero.
- To stop the count, press the "Stop" button. You can resume counting by pressing "Start" again.

## **3. Using the Clock Function**

- To switch to clock mode, press the "Clock" button.
- The display will show the current time.
- To return to timer mode, simply press the "Timer" button.

## **4. Utilizing the Memory Feature**

- Set the timer for a specific duration you frequently use.
- Once set, press the "Memory" button to save this setting.
- To recall the memory setting, press the "Memory" button again.

## **Troubleshooting Common Issues**

Even the most reliable devices can encounter issues. Here are some common problems users may face with the Intertek digital timer and their solutions.

### **1. Timer Not Powering On**

- Solution: Check the battery installation. Ensure that the batteries are inserted correctly and are not depleted.

### **2. Display is Faint or Unreadable**

- Solution: Replace the batteries. A weak battery can affect the display brightness.

### **3. Timer Not Counting Down or Up**

- Solution: Ensure that the timer is set correctly. Double-check the time settings and make sure you press the "Start" button.

### **4. Alarm Not Sounding**

- Solution: Check if the alarm volume is turned down. Some models allow users to adjust the alarm sound.

## **Maintenance of the Intertek Digital Timer**

To ensure the longevity and reliability of your Intertek digital timer, regular maintenance is essential. Here are some tips to keep your timer in optimal condition.

### **1. Battery Care**

- Replace batteries as soon as they show signs of depletion.
- Remove batteries if the timer will not be used for an extended period to prevent corrosion.

## **2. Cleaning the Timer**

- Use a soft, damp cloth to clean the exterior of the timer. Avoid using abrasive cleaners that could scratch the surface.
- Ensure that the buttons are free from debris to maintain functionality.

## **3. Storage**

- Store the timer in a dry place when not in use. Avoid exposure to extreme temperatures or humidity, which can damage the electronics.

## **Conclusion**

The Intertek digital timer is a versatile and user-friendly device suitable for various applications, from cooking to exercise routines. Understanding its features, setting it up, operating it effectively, and maintaining it properly will ensure that you get the most out of this handy tool. With this comprehensive guide, you should feel confident in using your Intertek digital timer to manage your time efficiently and effectively.

## **Frequently Asked Questions**

### **How do I set the time on my Intertek digital timer?**

To set the time on your Intertek digital timer, press the 'Set' button until the hours flash. Use the '+' or '-' buttons to adjust the hour, then press 'Set' again to adjust the minutes. After setting, press 'Start' to save the time.

### **What do I do if my Intertek digital timer is not displaying correctly?**

If your Intertek digital timer is not displaying correctly, try resetting it by removing the batteries for a few minutes and then reinserting them. Ensure the batteries are fresh and properly installed.

### **Can I use my Intertek digital timer for multiple cooking sessions?**

Yes, the Intertek digital timer can be used for multiple cooking sessions. You can reset the timer after each session by pressing the 'Reset' button.

### **Does the Intertek digital timer have a countdown**

## feature?

Yes, the Intertek digital timer has a countdown feature. Simply set the desired time using the 'Set' button, and the timer will count down to zero, alerting you when the time is up.

## What is the maximum time I can set on the Intertek digital timer?

The maximum time you can set on the Intertek digital timer is typically 99 minutes and 59 seconds, depending on the model.

## How loud is the alarm on the Intertek digital timer?

The alarm on the Intertek digital timer is designed to be loud enough to hear from a distance, but the volume may vary by model. If it's too quiet, check if there's a volume adjustment feature in the manual.

## Where can I find the manual for my Intertek digital timer?

You can find the manual for your Intertek digital timer on the official Intertek website under the 'Product Support' section, or you may find a digital copy included with your product packaging.

Find other PDF article:

<https://soc.up.edu.ph/49-flash/files?ID=RFt76-7597&title=purpose-driven-life-study-guide.pdf>

## Intertek Digital Timer Manual

SGS BV intertek ...

Intertek 989 Intertek

-

4 CCIC BV Intertek

-

ETL UL

ETL UL

ETL 1896 ETL Intertek ETL UL

intertek (intertek) -

intertek 130 1989

SGS Intertek -

intertek sgs 3 intertek  
sgs

ITS ITS -

Intertek 100 Intertek

IATF16949? -

IATF ISO ISO 17021 IATF 7.5  
IATF IATF 16949

INTERTEK -

Intertek 100 Intertek  
Intertek ...

intertek -

Intertek 2002 ITRK.L  
(FTSE)100

SGS BV intertek ...

Intertek 989 Intertek

-

4 CCIC BV Intertek

-

...

ETL UL -

ETL 1896 ETL  
Intertek ...

intertek (intertek) -

intertek 130 1989

SGS Intertek -

intertek sgs 3 intertek  
...

ITS ITS -

Intertek 100 Intertek

IATF16949? -

Intertek IATF ISO ISO 17021 certification services Intertek IATF 7.5  
IATF ...

#### **INTERTEK** -

Intertek 100 Intertek ...

#### **intertek** -

Intertek 2002 ITRK.L (FTSE)100 ...

Find the complete Intertek digital timer manual here! Get step-by-step instructions and tips for optimal use. Learn more and maximize your timer's potential today!

[Back to Home](#)